

# Read and save these instructions

MODEL:KG300

**CAUTION:** Before starting installation, disconnect the power by turning off the circuit breaker or removing the fuse at fuse box.

Step 1: Remove the screws and the rubber washer from the switch box to allow easy wiring. (Fig.1)

Step 2: Remove and discard the center plug from the switch box plate. Attach the light kit to the switch box plate by feeding the wires and threading the light kit through the hole of the switch box plate, secure it to the switch box plate using the nut and lock washer. Be sure it is tight enough to prevent the light kit from vibrating loose. (Fig.1)

Step 3: Make the wire connections as follows and secure with the wire nuts provided:




- Connect white wire from the fan to white wire from the light kit.
- Connect blue wire from the fan to black wire from the light kit.

Step 4: While holding the switch box plate, slide the switch box plate up against the switch box and align the screw holes. Secure the switch box plate to the switch box using the screws and rubber washer removed earlier. (Fig.2)

**CAUTION:** Make sure that the wires are not pinched between the switch cup and the switch cup plate.

Step 5: Install 1 x 13W E27 CFL (Included). DO NOT EXCEED MAXIMUM WATTAGE RATING.

Step 6: To install light kit glass shade, loosen the light kit screws and install the glass shade to the light kit. Secure by tightening the light kit screws previously loosened. (Fig.3)

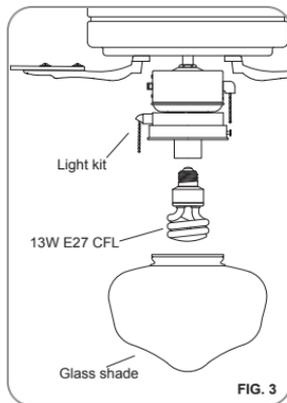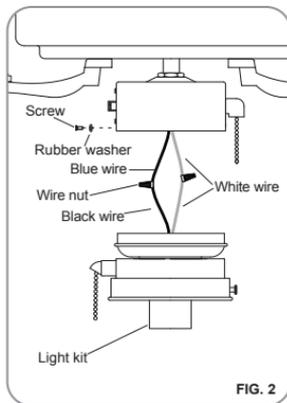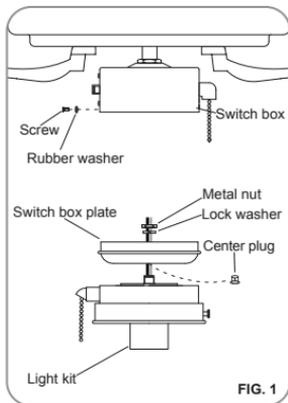

# Lea y guarde estas instrucciones

MODELO:KG300

**CUIDADO:** Apagar de comenzar con la instalación, desconecte la alimentación apagando el circuito del automático o quitando el fusible de la caja de fusibles.

Paso 1: Quite los tornillos y arandela de goma de la copa de interruptor para facilitar el cableado. (Fig.1)

Paso 2: Retire y deseche la clavija central de la place de copa de interruptor. Conecte el aparato de luz a la place de copa de interruptor por los cables de alimentación y roscando el aparato de luz a través del agujero de la place de copa de interruptor, fíjelo a la place de copa de interruptor usando la tuerca y arandela de cierre. Asegúrese de que esté suficientemente apretado para evitar que el aparato de luz se suelte por la vibración. (Fig.1)

Paso 3: Realice las conexiones del enchufe polarizadas:

- Conecte el alambre blanco de la ventilador con el alambre blanco del juego de luz.
- Conecte el alambre azul de la ventilador con el alambre negro del juego de luz.

Paso 4: Mientras toma la place de copa de interruptor, deslice la place de copa de interruptor contra la copa de interruptor y alinee los orificios. Asegure que la place de copa de interruptor a la copa de interruptor usando los tornillos y arandela de goma eliminados antes. (Fig.2)

**CUIDADO:** Asegurese que los alambres no sean pelliscado entre la caja del intereuptor y el plato de la caja del interruptor.

Paso 5:Instale 1 x 13W E27 CFL (Incluidos). NO EXCEDE EL VOLTAJE NOMINAL MÁXIMO.

Paso 6: Para instalar la cubierta de vidrio de conjunto de luz, afloje los tornillos de conjunto de luz y instale la pantalla de vidrio en el conjunto de luz. La fije por apretando los tornillos de conjunto de luz previamente aflojados. (Fig.3)

